



INSTALLATION INSTRUCTIONS PULL CABLE SERIES

1. Install valve assembly with bracket in approximately vertical position near engine away from the exhaust manifold. The valve should be mounted within 48" of the vaporizing atomizer location.
2. Pass control cable thru dash panel and fire wall (3/8" hole) and connect to actuating valve lever as shown. Secure cable to valve assembly with set screw and wire to arm by looping. **Do not over tighten set screw.**
3. Place gasket in valve assembly and screw cylinder onto valve hand tight.
4. Screw vaporizing jet nozzle into 1/8" pipe threaded hole in manifold so that mark on fitting shows vaporizing holes in horizontal position.
5. Connect valve assembly to jet nozzle using plastic tubing and fittings provided.

OPERATING INSTRUCTIONS

1. Start cranking engine.
2. Activate system - Pull knob.
3. Release starting fluid to engine - Push in knob.